


WIRING DIAGRAM OF BCM232

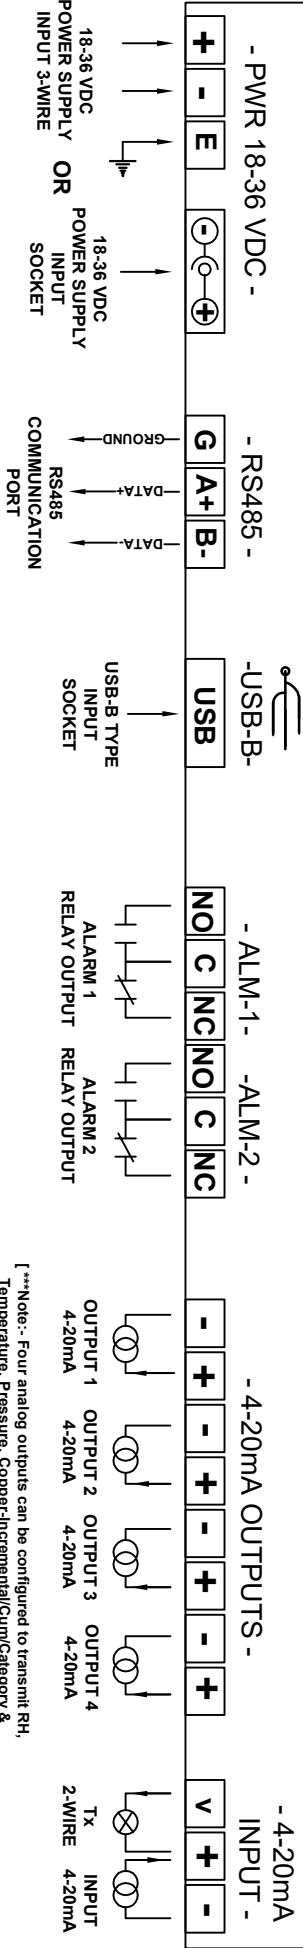

[**Note:- Four analog outputs can be configured to transmit RH, Temperature, Pressure, Copper-Incremental/CumCategory & Silver-Incremental/CumCategory through the BCM connect software]



MICRO SYSTEMS & CONTROLS
Your automation solution partner

Address : Micro Systems & Controls 140A, Santoshpur Avenue,
Kolkata 700075, West Bengal, India

Phone No. : +91-33-24163135 / 24168933
Fax: +91-33-24163135

Website : www.mscontrols.com
Email : Support@mscontrols.com

APPROVED BY :

TITLE : **WIRING DIAGRAM OF BCM232**

CLIENT :

DRAWN BY : K.PALIT

SHEET NO. : 1OF1

SCALE: N.T.S

DWG NO. : D-03-093

REV :

01

DATE :

31-07-2021